

Hytera

OWNER'S MANUAL

DIGITAL MOBILE RADIO



The Hytera logo is displayed in a light gray font on a dark gray rectangular background. The word "Hytera" is written in a clean, sans-serif typeface.

Preface

Thanks for your favor in our product. To derive optimum performance from the product, please read this manual and the supplied Safety Information Booklet carefully before use.

This manual is applicable to the following model:

MD78X (X may indicate 2, 5, 6 or 8)

MD78XG (X may indicate 2, 5, 6 or 8)

Instructional Icons

The following icons are available through this manual:

Alert Icons



Caution: indicates situations that could cause damage to your product.



Note: indicates tips that can help you make better use of your product.

Function Icons



: indicates functions that are available on digital channel only.



: indicates functions that are available on analog channel only.

Functions marked with no function icons are available on both analog and digital channels.

Term Explanation

Key Operation

Short press: to press a key and release it quickly.

Long press: to press a key and remain holding it down for a predefined period (2 seconds by default).

Hold down: to press a key and remain holding it down.

Private Call

Private Call is a call initiated by a single user to another user.

Group Call

Group Call is a call initiated by a single user to a group.

All Call

All Call is a call initiated by a single user to all the other users on a channel.

Squelch

This technology can remove excessive background noises, improving your communication quality.

PTT ID

PTT ID, namely radio identity, allows a radio with display or the control center to identify the calling party.

Copyright Information

Hytera is the trademark or registered trademark of Hytera Communications Co., Ltd. (the Company) in PRC and/or other countries or areas. The Company retains the ownership of its trademarks and product names. All other trademarks and/or product names that may be used in this manual are properties of their respective owners.

The product described in this manual may include the Company's computer programs stored in memory or other media. Laws in PRC and/or other countries or areas protect the exclusive rights of the Company with respect to its computer programs. The

purchase of this product shall not be deemed to grant, either directly or by implication, any rights to the purchaser regarding the Company's computer programs. Any of the Company's computer programs may not be copied, modified, distributed, decompiled, or reverse-engineered in any manner without the prior written consent of the Company.

The AMBE+2™ voice coding technology embodied in this product is protected by intellectual property rights including patent rights, copyrights and trade secrets of Digital Voice Systems, Inc.

This voice coding technology is licensed solely for use within this product. The user of this technology is explicitly prohibited from attempting to decompile, reverse engineer, or disassemble the Object Code or in any other way convert the Object Code into a human readable form.

U.S. Patent Nos. #6,912,495 B2, #6,199,037 B1, #5,870,405, #5,826,222, #5,754,974, #5,701,390, #5,715,365, #5,649,050, #5,630,011, #5,581,656, #5,517,511, #5,491,772, #5,247,579, #5,226,084 and #5,195,166.

Disclaimer

The Company endeavors to achieve the accuracy and completeness of this manual, but no warranty of accuracy or reliability is given. All the specifications and designs are subject to change without notice due to continuous technology development. No part of this manual may be copied, modified, translated, or distributed in any manner without the express written permission of us.

If you have any suggestions or would like to learn more details, please visit our website at:<http://www.hytera.com>.

RF Radiation Information

RF Radiation Profile

Radio Frequency (RF) is a frequency of electromagnetic radiation in the range at which radio signals are transmitted. RF technology is widely used in communication, medicine, food processing and other fields. It may generate radiation during use.

RF Radiation Safety

In order to ensure user health, experts from relevant industries including science, engineering, medicine and health work with international organizations to develop standards for safe exposure to RF radiation. These standards consist of:

- United States Federal Communications Commission, Code of Federal Regulations; 47CFR part 2 sub-part J;
- American National Standards Institute (ANSI)/Institute of Electrical and Electronic Engineers (IEEE) C95. 1-1992;
- Institute of Electrical and Electronic Engineers (IEEE) C95. 1 – 1999;
- International Commission on Non-Ionizing Radiation Protection (ICNIRP) 1998.

FCC Regulations

Federal Communication Commission (FCC) requires that all radio communication products should meet the requirements set forth in the above standards before they can be marketed in the

U.S., and the manufacturer shall post a RF label on the product to inform users of operational instructions, so as to enhance their occupational health against exposure to RF energy.

Operational Instructions and Training Guidelines

To ensure optimal performance and compliance with the occupational/controlled environment RF energy exposure limits in the above standards and guidelines, users should transmit no more than 50% of the time and always adhere to the following procedures:

















- (1) Antenna gain must not exceed 5dBi for UHF or 3.5dBi for VHF.
- (2) The antenna installation must comply with the requirements of manufacturer or supplier, and it must be 1 meter away from human body.

EU Regulatory Conformance



As certified by the qualified laboratory, the product is in compliance with the essential requirements and other relevant provisions of the Directive 1999/5/EC. Please note that the above information is applicable to EU countries only.

CE 0678 

Contents

Contents	1		
Checking Items in the Package	3		
Product Overview	4		
Front Panel	4		
Rear Panel	4		
Programmable Keys	4		
Installation	6		
Instructions	6		
Installation Tools	6		
Installation Steps	6		
Status Indication	8		
LCD Icon	8		
Status Indication	9		
LED Indicator	9		
Basic Operations	10		
Turning the Radio On/Off	10		
Adjusting the Volume	10		
Selecting a Zone	10		
Selecting a Channel	10		
Switching the Channel Mode	10		
Call	11		
Private Call 	11		
Group Call 	12		
All Call 	12		
Calls on Analog Channels 	12		
Phone	12		
Menu Navigation	14		
Contact	14		
Phone	15		
Message 	15		
Call Logs 	16		
Roaming 	16		
Scan	16		
Zone	16		
Settings	17		
Accessories 	20		
Functions and Operations	21		
Home Screen	21		
Scan	21		
Public Address	21		
Talk Around	22		
Monitor 	22		
Squelch Off 	22		
One Touch Call	22		
Telemetry 	23		
Roam 	23		
Lone Worker	23		
Emergency	24		
Horn & Lights 	27		
Ignition Sense	28		
Scrambler  /Encrypt 	28		
Busy Channel Lockout	28		
Time-out Timer (TOT)	29		
Pseudo Trunking 	29		
MIC AGC	29		
Emergency Footswitch	29		

 
Contents

Channel Steering	29
Radio Registration Service 	29
GPS Revert 	29
Signaling Introduction	30
HDC1200	30
5-Tone	30
2-Tone	31
Troubleshooting	32
Care and Cleaning	33
Optional Accessories	34
Appendix	35
Input Method	35


Checking Items in the Package

Please unpack carefully and check that all items listed below are received. If any item is missing or damaged, please contact your dealer.


1 Radio Unit



2 Palm Microphone

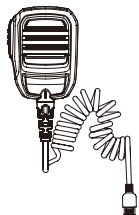

3 Microphone Hanger and Screws

 


4 Power Cord




5 Fuse



6 Mounting Bracket Kit

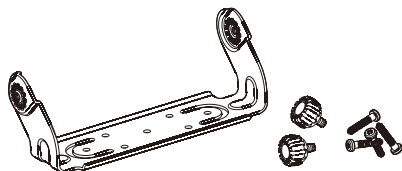

7 GPS Antenna

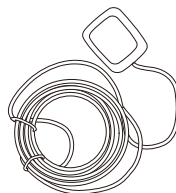


8 Documentation Kit



Note: To realize functions enabled by inputting, please purchase a palm microphone with keypad. Go to Optional Accessories for more details.


Product Overview

Front Panel

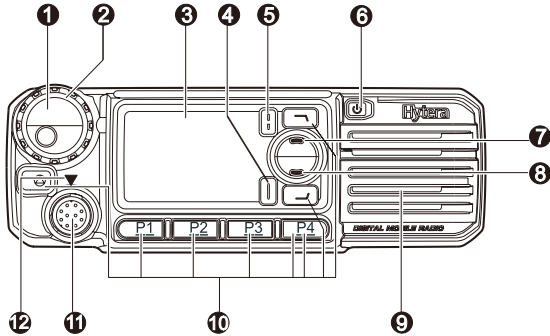

No.	Part Name	No.	Part Name
1	Volume Control / Channel Selector Knob	2	LED Indicator
3	LCD Display	4	OK/Menu Key
5	Back Key	6	Power On/Off Key
7	Up Key	8	Down Key
9	Speaker	10	Programmable Keys
11	Microphone Jack	12	Installation Index

Rear Panel

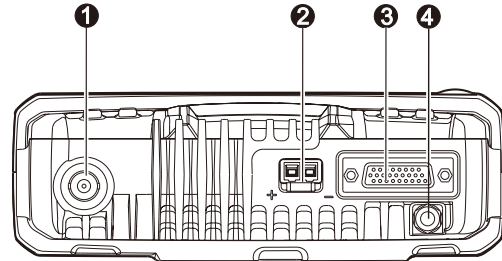




No.	Part Name	No.	Part Name
1	RF Antenna Connector	2	Power Inlet
3	Accessory Jack	4	GPS Antenna Connector
















Note: The GPS Antenna Connector is only available for MD78XG.

Programmable Keys

For enhanced convenience, you may request your dealer to program the keys **P1**, **P2**, **P3**, **P4**, ,  and  as shortcuts to the functions listed below:


Product Overview

No.	Shortcut Keys	Function
1	Zone Up	
2	Zone Down	To select a desired zone quickly
3	Contact List	To access the menu "Contact List" quickly
4	Message 	To access the menu "Message" quickly
5	Call Log 	To access the menu "Call Logs" quickly
6	Adjust Power Level	To adjust power level quickly
7	Public Address	To make public address via the external speaker quickly
8	Talk Around	To directly communicate with other radios
9	Monitor 	
10	Monitor Momentary 	To adjust the condition for incoming signal match
11	Squelch Off 	
12	Squelch Off Momentary 	To always unmute speaker no matter whether carrier is present or not
13	Home Screen	To quickly return to the previous menu or home screen
14	Scan	To receive signals on other channels
15	Nuisance Temporary Delete	To temporarily ignore unwanted channel activity
16	Emergency	To summon help in emergent situations
17	Adjust Squelch Level 	To temporarily adjust the squelch threshold required for the radio to unmute

18	Scrambler  /Encrypt 	Scrambler: To encrypt your voice so as to guarantee privacy of your communication Encrypt: To encrypt your voice and message so as to guarantee privacy of your communication
19	Lone Worker	To protect the operators from accidents
20	One Touch Call	To make appropriate services quickly
21	Status 	To access the menu "Status List" quickly (dedicated for 5-Tone)
22	Telemetry 	To supervise remote devices
23	DTMF Keypad	To enter or exit the DTMF keypad mode (In the DTMF keypad mode, you can enter a number via the palm microphone with keypad to make a phone call.)
24	Phone List	To access the menu "Phone List" quickly
25	Horn & Lights 	To provide audible and visible alert to notify the absent user
26	Roam 	To communicate between sites in the IP Multi-site Connect system



Note:

- 1 Long and short press of a key can be assigned with different functions by your dealer.
- 2  is programmed as the **Emergency** key by default, and is programmable by your dealer.

Installation

Before you install the radio in a vehicle, be sure to read the following instructions carefully:

Instructions

- The radio operates with cathode-grounded power supply of **13.6V ± 15%** only. Please check polarity and voltage of the power supply on the vehicle before you install the radio.
- Please check how long the screws will extend from the bottom surface of the radio, before you install the radio. Drill the mounting hole cautiously to avoid damage to the vehicle wiring and other parts.
- Please connect Hytera supplied antenna and power cord to the radio, before you install it in the bracket. **And make sure the antenna and power cord is dedicated for Hytera digital radios.**
- Install the radio with Hytera supplied mounting bracket, to avoid radio looseness in case of accidents. The loose radio may cause bodily injury.
- Install the radio in a location where it's easy to reach the front panel controls.
- Ensure that the available space for wiring at back of the radio is reserved.
- When the fuse for DC power cord needs replacement, it must be replaced by a fuse with the same specification.


Installation Tools

- Electric drill
- Cross head screwdriver
- Hex socket sleeve (used for 4.8*20mm self-tapping screws)

Installation Steps

1. Install the **bracket** in a location where it's easy to operate the radio.
2. Connect accessories such as **antenna** and **power cord** to the radio.
3. Slide the **radio** into the mounting bracket and secure it using the locking knobs.
4. Install the **microphone hanger** in a location where it can be reached easily.
5. Plug the **palm microphone** into the microphone jack on the front panel (but at first align the triangle index on the palm microphone with the microphone installation index), and place it on the hanger when you do not use it.

Installation

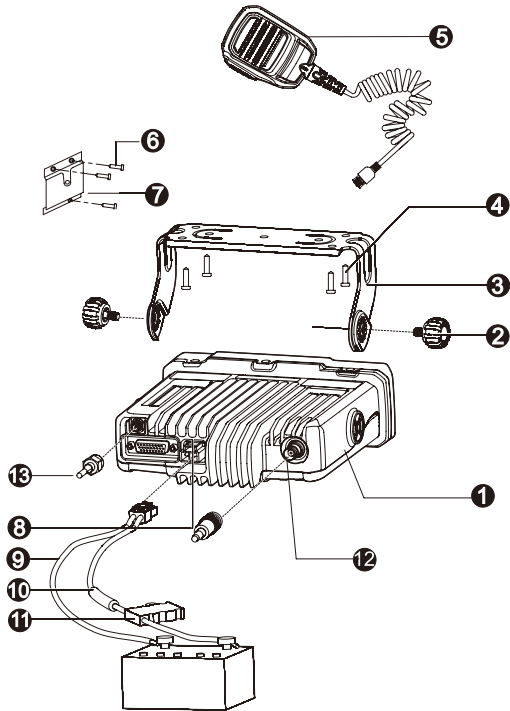






















No.	Part Name	No.	Part Name
1	Radio Unit	2	Locking Knobs
3	Mounting Bracket	4	Self-tapping Screws (4.8×20 mm)
5	Palm Microphone	6	Self-tapping Screws (4×16mm)
7	Microphone Hanger	8	Power Inlet
9	Power Cord (black)	10	Power Cord (red)
11	Fuse	12	RF Antenna Connector
13	GPS Antenna Connector		

Status Indication

LCD Icon

Status Icon

Icon Name	Icon	Radio Status
RSSI		No signal
		More bars indicate better signal strength
Message Icon		New message/unread message
		InBox is full
Scan Icon		Scanning is in progress
		Scanning pauses on a non-priority channel
		Scanning pauses on Priority Channel 1
		Scanning pauses on Priority Channel 2
TX Power Icon		Low TX power for the current channel
		High TX power for the current channel
Monitor Icon		The Monitor feature is active
Speaker Icon		The speaker is unmuted

Emergency Icon		The Emergency mode (other than secret emergency) is active or an emergency message is received
Knob Operation Mode Icon		The knob currently operates in channel selection mode
		The knob currently operates in volume adjustment mode
GPS Icon		The GPS feature is active, and valid GPS data is received
		The GPS feature is active, but no valid GPS data is received
Scrambler/Encrypt Icon		The Scrambler/Encrypt feature is active
Missed Call Icon		A call is missed
DTMF Keypad Icon		The DTMF keypad is enabled
Roam Icon		Roaming is in progress



Note: The description related to the GPS feature in this manual is applicable to MD78XG only.

Status Indication

Operation Mode Icon

Icon Name	Icon	Operation Mode
Operation Mode Icon	DM	Direct Mode: Under this mode, radios communicate with each other directly
	RM	Repeater Mode: Under this mode, radios communicate with each other via a repeater

LED Indicator

The LED indicator will help you easily identify the current radio status.


LED Indicator	Radio Status
LED flashes green.	Powering on
LED glows red.	Transmitting
LED glows green.	Receiving
LED flashes green slowly.	Scanning
LED flashes orange rapidly.	Emergency
LED glows orange.	After voice communication ends, you can hold down the PTT key to talk while the LED is glowing orange.

Basic Operations

Turning the Radio On/Off

To turn the radio on, long press the **Power On/Off** key until the radio shows power-up screen and sounds power-up alert, and the LED flashes green. To turn the radio off, press the **Power On/Off** key.

Adjusting the Volume

When the **Volume Control / Channel Selector** knob operates in volume adjustment mode (the radio displays the icon ) , rotate the knob clockwise to increase the call volume, or counter-clockwise to decrease it.

Selecting a Zone


A zone is a group of channels exhibiting the same property, and is programmed by your dealer. The radio supports up to 64 zones, each with a maximum of 16 channels. You may select a zone through any of the following methods:

1. Through menu selection
Go to the menu "Zone", and use the **Up/Down** key to select your desired zone.
2. Through the function keys
You may quickly toggle to your desired zone by pressing the programmed **Zone Up** or **Zone Down** key.



Note: You dealer may designate the power-up zone and channel. If not, the radio will enter the zone and channel last used.

Selecting a Channel

Press the **Volume Control / Channel Selector** knob to switch it to channel selection mode (the radio displays the icon ) , and then rotate the knob to select your desired channel. Alias of the current channel will appear in the home screen.

If you enable the Channel Notify feature via "Menu -> Settings -> Radio Set -> Tone -> Channel Notify", your radio will broadcast the channel number upon channel switching. The channel notifying language (only Chinese and English are available currently) is preset by your dealer.



Note: The knob is in volume adjustment mode by default, and will return to this mode in 5 seconds after you select a channel.

Switching the Channel Mode


Each channel can be programmed as either analog channel or digital channel. If the current zone includes both analog and digital channels, you may quickly switch between digital and analog channels through the **Volume Control / Channel Selector** knob.

Call

To ensure optimal volume of the receiving radio, hold the palm microphone approximately 2.5 to 5 centimeters away from your mouth.

Private Call

Transmitting a Private Call

You may transmit a Private Call through any of the following methods. When transmitting a Private Call, the icon  will appear.

- **Transmitting a call to the preset contact**

In the home screen, hold down the **PTT** key on the palm microphone to transmit a Private Call to the Private Call contact preset for the current channel.



Note: Your dealer may preset a contact for each digital channel. The preset contact could be a Private Call contact, a Group Call contact or an All Call contact.

- **Transmitting a call through Contact List or Call Logs**

1. Go to "Menu -> Contact -> Contact List", or go to "Menu -> Call Logs" and access the Outgoing/Incoming/Missed list.
2. Use the **Up/Down** key to select the Private Call contact you want to call.
3. Hold down the **PTT** key to transmit the Private Call.

 
- **Transmitting a call through Manual Dial**

1. Go to "Menu -> Contact -> Manual Dial".

2. Input a Private Call number you want to call using the microphone with a keypad.
3. Hold down the **PTT** key to transmit the Private Call.



Note:

1. If your radio supports both Private Call Manual Dial and Group Call Manual Dial, you can switch between them by pressing . The LCD will display appropriate ID.
2. If the Default Numeric Key Selection feature is enabled by your dealer, you can enter a Private Call number in the home screen using a palm microphone with keypad, and then hold down the **PTT** key to transmit the Private Call. However, if the DTMF keypad is enabled, the number entered in the home screen is a phone number. You can dial the Private Call number through the menu "Manual Dial" only.

Receiving and Responding to a Private Call

When a Private Call is received, your radio will display the icon






You may hold down the **PTT** key within the preset time period to call back. If you do not respond to a received Private Call, your radio will provide appropriate indications. .

Call




Note:

1. If the Display Missed Call feature is enabled by your dealer, your radio will display the missed call icons  and .
2. If the Display Missed Call feature is not enabled by your dealer, your radio will display the missed call icon  only.


Group Call

Transmitting a Group Call

You may transmit a Group Call through any of the following methods. When transmitting a Group Call, the icon  will appear.

- Transmitting a call to the preset contact
- Transmitting a call through Contact List
- Transmitting a call through Manual Dial

Receiving and Responding to a Group Call


When a Group Call is received, your radio will display the icon .

You may hold down the **PTT** key within the preset time period to call back. If you do not respond to a received Group Call, the radio will display the missed call icon. The indication information is the same as that for the Private Call.

All Call

Transmitting an All Call

Two methods are available for transmitting an All Call: transmitting a call to the preset contact; transmitting a call through Contact List. They are the same as those in Transmitting

a Private Call. When transmitting an All Call, the icon  will appear.



Note: You can transmit an All Call only when it is enabled by your dealer.

Receiving an All Call

When an All Call is received, your radio will display the icon



Note: You cannot respond to an All Call.

Calls on Analog Channels

To transmit on an analog channel, hold down the **PTT** key and speak into the microphone. To receive, release the **PTT** key.

Phone

If the repeater is connected with a PSTN gateway (such as Zetron M30), the radio can communicate with the phone via it.

Transmitting a phone call:

1. Access the phone system.

- Live Dial
Hold down the **PTT** key, and enter the access code via the palm microphone with keypad. Then release the **PTT** key. The radio beeps and displays the dialing information. When the phone system is accessed successfully, the radio goes to the DTMF keypad mode.
- Buffer Dial
- A. Enter the DTMF keypad mode. The following methods are available to enter this mode.
 - Go to “Menu -> Phone -> Manual Dial” to enter the DTMF keypad mode.
 - Press the programmed **DTMF Keypad** key.
 - Go to “Menu -> Phone -> DTMF Keypad”, and then select “Enable”. The number entered via the palm microphone with keypad in the home screen is the DTMF code.
- B. Access the phone system: Enter the access code via the palm microphone with keypad and then press the **PTT** key. The radio beeps and displays the dialing information. When the phone system is accessed successfully, the radio goes to the DTMF keypad mode again.

2. Make the phone call.



- Live Dial: Hold down the **PTT** key and enter the phone number via the palm microphone with keypad. Release the **PTT** key after the complete number is entered.
- Buffer Dial: Enter the phone number via the palm microphone with keypad and then hold down the **PTT** key.

- Select “Back”. Then go to “Menu -> Phone ->Phone List” to select a desired contact, and press the **PTT** key.
- 3. After the call is established, you can hold down the **PTT** key to talk, and release it to listen.


To end the call, you can send the de-access code (the input method is the same as that for the access code) to exit the phone system.

If the phone is hung up, the call will be ended and the phone system will be exited too.

Receiving a phone call:

- When the radio receives a phone call, the icon  or  will appear.
- You may hold down the **PTT** key within the preset time period to call back. If you do not respond to it, your radio will provide appropriate indications. The indication information is the same as that for the Private Call.


Menu Navigation

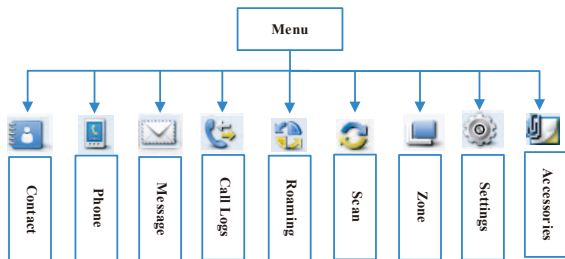

This radio supports menu reset function, that is, if you do not operate the menu for a predefined time period, the radio will automatically return to the home screen.

Contact

To access this item, press the **Menu** key in the home screen and then select "Contact".

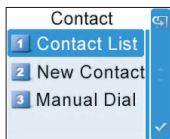

Contact List

You can save up to 512 entries in the list. To access this item, select "Contact -> Contact List" or press the shortcut key for Contact List.

Ctrl Services

You can send to a Private Call contact the following commands: alert call, radio check, remote monitor, radio enable or radio disable. See the "Manual Dial" below for details.

Editing a Contact

You can edit the number and alias of each Private Call contact.

Viewing a Contact

You can view details of each contact.


Deleting a Contact

You can delete a Private Call contact. However, please note that you can not delete the contact when there is only one entry left in the list. In addition, the Private Call contact preset on the currently used channel cannot be deleted.

New Contact

You can add a Private Call contact to the contact list. The number and alias of each contact must be unique, and the available number range is 1-16776415.

Manual Dial

You can manually input the required number for calling. On a digital channel, if your radio supports both Private Call Manual Dial and Group Call Manual Dial, you can switch between them by pressing . The LCD will display appropriate ID.

For a Private Call number, you can select any of the following options:

Menu Navigation

Alert Call

You can send an Alert Call command to a Private Call contact. The called party will call you back after receiving the alert.

Radio Check

You can send a Radio Check command to a Private Call contact, so as to confirm whether the radio is powered on or operates on the current channel.

Remote Monitor

You can enable the microphone of a Private Call contact, and monitor its activities or background voice remotely.

Radio Enable

You can enable the radio of a Private Call contact remotely and allow it to be used normally.

Radio Disable

You can disable the radio of a Private Call contact remotely and disallow it to be used normally.

Phone

To access this item, press the **Menu** key in the home screen and then select “Phone”.

Phone List

To store phone contacts.

Manual Dial


You can manually input a phone number to make a phone call. For details, please refer to Call -> Phone in the manual.

DTMF Keypad

To enable or disable the DTMF keypad. If enabled, the number entered via the keypad in the home screen is the DTMF code.

Message

To access this item, press the **Menu** key in the home screen and then select “Message”, or press the shortcut key for Message directly.

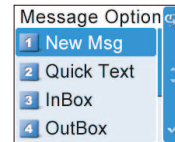

New Msg


You can create new text message (256 characters at most) and send it to an individual user or to a talk group.

Quick Text

Under this option there are some text messages (10 entries at most) preset by your dealer. You can choose to edit and send any entry.

Menu Navigation

InBox

The InBox can save up to 20 received messages. When the InBox is full, the icon  will appear, and the earliest message will be overwritten by the latest one automatically.

For each message, you can choose to perform any of these operations: Reply, Forward, View Details and Delete.

To delete all messages in the InBox, select "Message -> InBox -> Delete All".

OutBox

The OutBox can save up to 20 sent messages. When the OutBox is full, the earliest message will be overwritten by the latest one automatically.

For each message, you can choose to perform any of these operations: Resend, Forward, View Details and Delete.

To delete all messages in the OutBox, select "Message -> OutBox -> Delete All".

Drafts


The Drafts can save up to 20 draft messages. When the Drafts is full, the earliest message will be overwritten by the latest one automatically.

For each message, you can choose to perform any of these operations: Send, Save and Delete.

To delete all messages in the Drafts, select "Message -> Drafts -> Delete All".

Call Logs

To access this item, press the **Menu** key in the home screen and then select "Call Logs", or press the shortcut key for Call Logs directly.

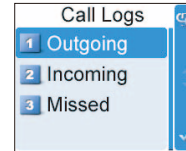

This radio can save up to 10 private call entries in the Outgoing/Incoming/Missed list respectively. When the Outgoing/Incoming/Missed list is full, the earliest entry will be overwritten by latest one automatically.

After accessing a list and selecting an entry, you can perform any of these operations: hold down the **PTT** key to initiate a call; add it to Contact List; or delete it.

To delete all entries in the Outgoing/Incoming/Missed list at a time, select "Call Logs -> Outgoing/Incoming/Missed -> Delete All".


Roaming

To enable or disable the Roam feature. To access this item, press the **Menu** key in the home screen and then select "Roaming".

Scan

To access this item, press the **Menu** key in the home screen and then select "Scan".

Menu Navigation

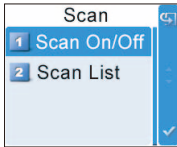

Scan On/Off

The Scan feature allows you to listen to communication activities on other channels so that you can keep a close track of your team members. This option is used to enable or disable the function.

Scan List

You can request your dealer to create a scan list for each channel. Each list may contain 32 channels (digital channel or analog channel) at most. After accessing the list, you can perform any of the following operations:

Adding a Channel

To add a new channel to the active scan list.

Editing Priority Channel

To set the selected channel as a non-priority or as a priority channel. If you are interested in activities on a channel, you can set it as a priority channel, which will be scanned more frequently than a non-priority channel.

Each scan list may contain two priority channels at most. **P1**


indicates priority channel 1, and **P2** indicates priority channel 2.

Deleting a Channel

To remove a channel from the active scan list. However, the first channel in the list can not be deleted.

Zone

To access this item, press the **Menu** key in the home screen and then select "Zone".

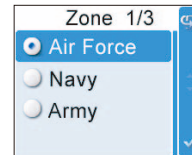

This radio supports up to 64 zones. You can use this menu to select your desired zone.

Settings

To access this item, press the **Menu** key in the home screen and then select "Settings".





Menu Navigation

Radio Set

You can optimize your radio performance by customizing related parameters according to actual needs and your preferences.

Power Level

This option allows you to set TX power level. Alternatively, you can change the power level by pressing the shortcut key for Adjust Power Level in the home screen.

There are two levels available: High (indicated by ) and Low (indicated by ). High power level enables you to communicate with farther team members.



Note: Power level should be set for each channel individually.

Scrambler

To set whether to enable the Scrambler feature.

Squelch

This option allows you to select an appropriate squelch level. Alternatively, you can change the squelch level by pressing the shortcut key for Adjust Squelch Level in the home screen. There are three levels available: Tight, Normal and Open. The default squelch level is “Normal”, and is often used in low noise environment.

And generally, “Tight” is used in high noise environment. It requires stronger signal for the radio to unmute. However, if

the squelch level is set to Open, the speaker will keep unmuted irrespective of the decoding conditions.

Encrypt

To set whether to enable the Encrypt feature.

On/Off

To set whether to enable the Encrypt feature.

Key List

To select your desired encrypt key. The radio supports 30 keys in all.

New Key

To create a new key.

Key ID

You can create a new key ID, which only consists of numbers ranging from 1 to 255.

Key Alias

You can create an alias for this new key. The alias can contain 16 characters at most, composed of Chinese characters, English letters, numbers and symbols.



Note: The key alias and key ID must be unique.

Key Length

You can edit the length of this new key.

Menu Navigation

Key Value

You can edit the key value, which can consist of numbers and letters A-F (within the predefined key length).

Save

You can save and add the new key to the key list.



Note: You can request your dealer to delete a key, if necessary.

Language

To set the language in which all interface information is displayed.

Backlight

To set the backlight parameters. There are three options available: On, Off and Timed. The duration for Timed is programmed by your dealer. Available range: 5-60 seconds.

Brightness

This option allows you to set the display brightness. You can raise or lower it using the **Up/Down** key.

LED

To set whether to enable LED indication.

Tone

To set alert tones for your radio. You can set the following tones:

Radio Silent: to set whether the radio will give tone indication. If Silent On is selected, all tone indication will be cancelled.

Keypad: to set whether the radio will give tone indication when you are making keypad operations.

TextMsg: to set whether the radio will give tone indication when it receives a message.

Private Call: to set whether the radio will give tone indication when it receives a Private Call.

Group Call: to set whether the radio will give tone indication when it receives a Group Call.

Talk Permit: to set whether the radio will give tone indication for transmission. The following options are available: Disable (no tone indication for transmission), Digital Only (tone indication for transmission on digital channels only), Analog Only (tone indication for transmission on analog channels only), and Enable (tone indication for transmission on both analog and digital channels).

Call End: to set whether the radio will give tone indication when a call is completed.

Voice End: to set whether the radio will give tone indication after completion of voice receiving.

Channel Notify: to set whether the radio will broadcast the channel number upon channel switching. The radio broadcasts the channel number only if the channel is switched via the **Channel Selector** knob. Currently, the available channel notifying languages are Chinese (for Chinese menu only) and English (for menus in languages other than Chinese).

Signaling Side: To set whether the radio will sound continuous tone during signaling transmission. It is available for call in HDC1200/5-Tone/2-Tone system.

Menu Navigation


Lone Worker

To set whether to enable the Lone Worker feature.

Device Info

With this option, you can view basic information of your radio, including serial number, radio model, frequency range and firmware version, etc.

Accessories

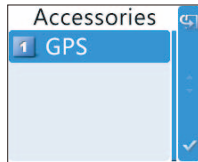

To access this item, press the **Menu** key in the home screen and then select "Accessories".

GPS

GPS Switch

To set whether to enable the GPS feature.

Position

With this option, you can view longitude, latitude, time, date, speed, altitude and SA (satellite) information of your radio.

On a digital channel, you can send GPS text information.

Operation:

1. Press the **OK** key. The "Contact List" is selected by default.
2. Press the **OK** key again to access the "Contact List". Then use the **Up/Down** key to select your desired contact.
Or you can select "Manual Dial" to access the manual dialing interface. Then enter the private call or group call number using a palm microphone with keypad. For specific operations, please refer to Menu Navigation -> Contact -> Manual Dial in this manual.
3. Press the **OK** key to send the GPS message to the selected contact.

Time Zone

You can choose your time zone to correct the received GPS time. We recommend you to set the time zone before your initial use of this feature.

You can select a desired time zone via the User Define method as per your actual needs. The available time zone options are the same as those for the PC. For example, if the time at your location is 5.45 hours earlier than GMT, you can select "GMT+5.45" as your time zone.

Horn & Lights

To set whether to enable the Horn & Lights feature. If the mobile radio receives an emergency alert, a call alert or a private call and no key operation is made within the specified period, it will alarm via the external alarm device (speaker or light).

Functions and Operations

Home Screen

The feature allows you to quickly return to the previous menu or the home screen.



Operation:



In the editing screen, press the programmed **Home Screen** key, and the radio exits the screen and returns to the previous menu immediately; in other screens, press this key, and the radio returns to the home screen immediately.


Scan

This feature allows you to listen to communication activities on other channels so that you can keep a close track of your team members.

Operation:

1. To enable the feature, you can select “On” from the menu “Scan”; or
Press the programmed **Scan** key in the home screen; or
Switch to a channel for which the Auto Scan feature is enabled via the programming software.
2. After the feature is enabled, your radio will scan according to the scan list set for the channel on which scanning starts. The scanning process is as follows:
 - During scanning, the LCD displays the icon , and the LED flashes orange slowly.
 - When activities are detected on a channel, the radio will stay on the channel to receive current activities. If your radio stays on a non-priority channel, the LCD will display icon ; if on

Priority Channel 1 or Priority Channel 2, the LCD will display icon  or icon  respectively.

- If you don't want to hear activities on the channel, press the programmed **Nuisance Temporary Delete** key to remove the channel from the scan list temporarily.
 - If you want to continue staying on the channel, press the programmed **Monitor** or **Squelch Off** key during scan stay. 
3. To exit the scanning process, you can select “Off” from the menu “Scan”, or press the programmed **Scan** key again.

Public Address

This feature allows public address via the external speaker. After the feature is enabled, your voice will not be transmitted, but output via the external speaker (connected to the accessory jack on the rear panel) if you hold down the **PTT** key and speak.

Operation:

1. Press the programmed **Public Address** key to enable the feature.
2. Hold down the **PTT** key and speak into the microphone. Then your voice will be broadcasted clearly via the external speaker.
3. To disable the feature, press the **Public Address** key again.



Note: When this feature is enabled, you can neither communicate with other users, nor enter the menu.

Functions and Operations

Talk Around

You can continue to communicate in DM mode by pressing the programmed **Talk Around** key, when your repeater malfunctions, or when your terminal is out of the repeater's range but within talking range of other terminals.



Operation:

Press the programmed **Talk Around** key to switch between DM mode and RM mode.

Monitor

To adjust match conditions for signal receiving, you can enable the Monitor feature.

Operation:



- Press the programmed **Monitor** key to enable the feature, and the radio displays icon . To disable the feature, press this key again.
- Hold down the programmed **Monitor Momentary** key to enable the feature, and the mobile radio displays icon . To disable the feature, release this key.
- If the Off Hook Monitor feature is enabled by your dealer, the Monitor feature will be enabled when the mobile radio receives a call.

Squelch Off

If the Squelch Off feature is enabled, the speaker will keep

unmuted no matter whether carrier is present.

Operation:

- Press the programmed **Squelch Off** key to enable the feature. Then the radio displays the icon  and sounds background noise. To disable the feature, press this key again.
- Hold down the programmed **Squelch Off Momentary** key to enable the feature. Then the radio displays the icon  and sounds background noise. To disable the feature, release this key.

One Touch Call

You can request your dealer to set the **One Touch Call** key. By pressing such programmed key, you can make corresponding services detailed as below:

1. Services on the analog channel: to send calls to the 5-Tone or 2-Tone contact.
2. Services on the digital channel:
 - To send group calls or messages to the Group Call contact.
 - To send private calls, messages or make control services to the Private Call contact.
 - The control services contain: Alert Call, Radio Check, Remote Monitor, Radio Enable or Radio Disable. For details on control services, please refer to Menu Navigation -> Contact -> Manual Dial in the manual.

Operation:

Functions and Operations

Service	Operation
To send private calls/group calls on the digital channel.	Press the One Touch Call key and then hold down the PTT key.
<ul style="list-style-type: none">To send calls on the analog channel.To send messages.To make control services on the digital channel.	Press the One Touch Call key.

Telemetry

This feature allows you to remotely supervise the device connected with a radio. With this feature, you can control the device and view its status in the case that you are away from the device.

The method for supervising the device is programmable by your dealer. The available methods are:

- To supervise the device via the radio
If a device is connected with a radio, you can use another radio to supervise the device. All the radios involved should be configured with the Telemetry feature. For example, the dealer enables the Telemetry feature for both Radio A and Radio B, and assigns the Telemetry feature to the **P1** key on Radio A. To supervise the device C, connect it with Radio B, and press the **P1** key on Radio A.
- To supervise the device via a third-party software

If the Telemetry feature is enabled for the radio by your dealer, you can supervise the device connected with the radio via a third-party software.

Roam

This feature allows the radio to communicate between sites in the IP Multi-site Connect system. If enabled, the radio can communicate via any site in the IP Multi-site Connect system, thus ensuring seamless communication in the system.

Operation:

Go to “Menu -> Roaming”, and select “On” or “Off”.

Press the programmed **Roam** key to enable or disable the feature.

Lone Worker

This feature is ideal for persons who work lonely. If you encounter an incident and cannot operate your radio within the preset time period, your radio will alarm automatically to summon help from your companion.

Operation:

- To enable the feature,
 - Go to “Menu -> Settings -> Radio Set-> Lone Worker” and select “Enable”; or
 - Press the programmed **Lone Worker** key (a high-pitched tone sounds); or
 - Turn on the radio if the feature is enabled via the programming software.

Functions and Operations

2. If you cannot operate your radio within a preset response period, your radio will give alerts before this period expires (dependent on the settings by your dealer). At this time, you can terminate such alerts by rotating a knob or pressing a key. When the response period expires, your radio will trigger the current emergency system automatically.
3. To disable the feature,
Go to "Menu -> Settings -> Radio Set-> Lone Worker" and select "Disable"; or
Press the programmed **Lone Worker** key (a low-pitched tone sounds).



Note: If the Lone Worker feature is not disabled before your radio is powered off, it will remain enabled when powered on again.


Emergency

In case of an emergency, you can use the feature to ask for help from your companion or control center. The Emergency process has the highest priority. You can make emergency operation even when your radio is transmitting or receiving.

To enable the feature on a channel, an emergency system must be assigned to the channel via the programming software. In addition, the Emergency type, Emergency ID type and Emergency mode are settable via the programming software.

Emergency Type

For each Emergency mode, there are four Emergency types available. You can select one of them via your dealer:

Emergency Type	Description
Siren Only	In Emergency mode, the radio will sound shrill alarm tone and display icon 
Regular	In Emergency mode, the radio will give audible and visible indication.
Silent	In Emergency mode, the radio won't give any audible or visible indication.
Silent with Voice	In Emergency mode, the radio won't give any audible or visible indication, but will receive voice ACK from the companion or control center automatically.

Emergency ID Type

Your radio supports two Emergency ID types. You can select one of them via your dealer:





Emergency ID Type	Description
None	No signaling is used when the radio sends alarm information.
HDC1200	HDC1200 signaling is used when the radio sends alarm information.

Emergency Mode

Your radio supports three Emergency modes. You can select

Functions and Operations


one of them via your dealer (Note: For the following operation methods, we take the “Regular” type as an example).

Emergency Mode	Description
Alarm	In this mode, you can send alarm information to your companion or control center by pressing the programmed Emergency key, but you cannot talk with them.
Alarm with Call	In this mode, you can send alarm information by pressing the programmed Emergency key. When the icon  (analog channel) or  (digital channel) appears, you can speak into the microphone, allowing your voice and background noise to be transmitted automatically (you do not need to hold down the PTT key).
Call Only	In this mode, press the programmed Emergency key to go to the Revert Channel. When the icon  (digital channel) or  (analog channel) appears, you can speak into the microphone, allowing your voice and background noise to be transmitted automatically (you do not need to hold down the PTT key).

Operation Methods for Analog Emergency

Alarm (None & HDC1200)

Operation: Press the programmed **Emergency** key to send





alarm information. The radio displays the icon  and indication “Sending Alarm”, with red LED glowing. (None: If “Local Emergency Alarm” is enabled via the programming software, an alarm tone will sound.)

Three methods are available for you to exit the Emergency mode:




1. Once the emergency cycles expire, the radio will exit the Emergency mode automatically.
2. Long press the programmed **Emergency** key.
3. Hold down the **PTT** key. The radio will transmit on the channel on which the radio operates before entering the Emergency mode. (HDC1200)

Alarm with Call (None & HDC1200)

Operation:

1. Press the programmed **Emergency** key to send alarm information. The radio displays the icon  and indication “Sending Alarm”, with red LED glowing. (None: If “Local Emergency Alarm” is enabled via the programming software, an alarm tone will sound.)
2. When the icon  appears, you can speak into the microphone to make an emergency call.
3. When the icon  appears, you can receive. And when a call is received, the icon  appears.

Functions and Operations





- If the preset Voice Cycles expire, you can hold down the **PTT** key to make the emergency call again (the radio displays the icon , with red LED glowing). After the emergency call is transmitted, release the **PTT** key to receive (the radio displays icon , with LED flashing orange rapidly). And when a call is received, the icon  appears. (HDC1200 only)




Two methods are available for you to exit the Emergency mode:

- After the preset Alarm Cycles and Voice Cycles expire, the radio will exit the Emergency mode automatically. (None)
- Long press the programmed **Emergency** key.

Call Only (HDC1200)

Operation:

- Press the programmed **Emergency** key to go to the Revert Channel, and the radio displays the icon .
- If the Alarm with Call to Follow feature is enabled, you can speak into the microphone to make an emergency call when the radio displays the icon .
- When the icon  appears, you can receive. And when a call is received, the icon  appears.
- If the preset Voice Cycles expire, you can hold down the **PTT** key to make the emergency call again (the radio displays

the icon , with red LED glowing). After the emergency call is transmitted, release the **PTT** key to receive (the radio displays the icon , with LED flashing orange rapidly). And when a call is received, the icon  appears.

To exit the Emergency mode, long press the programmed **Emergency** key.




Note: Your dealer may set the number of alarm cycles and alarm duration (None), number of polite retries and impolite retries (HDC1200), number of voice cycles, duration of each transmission and TX interval.

Operation Method for Digital Emergency

Alarm

Operation: Press the programmed **Emergency** key to send

alarm information. The radio displays icon  and text information "Sending Alarm", with red LED glowing.








Two methods are available for you to exit the Emergency mode:

- Once the emergency cycles expire, the radio will exit the Emergency mode automatically.
- Long press the programmed **Emergency** key.

Alarm with Call

Functions and Operations


Operation:


1. Press the programmed **Emergency** key to send alarm information. The radio displays icon  and text information "Sending Alarm", with red LED glowing.
2. When the icon  appears, you can speak into the microphone to make an emergency call.
3. When the icon  appears, you can receive. And when a call is received, the icon  appears.
4. If the preset Voice Cycles expire, you can hold down the **PTT** key to make the emergency call again (the radio displays the icon  with red LED glowing). After the emergency call is transmitted, release the **PTT** key to receive (the radio displays icon , with LED flashing orange rapidly). And when a call is received, the icon  appears.






To exit the Emergency mode, long press the programmed **Emergency** key.

Call Only

Operation:

1. Press the programmed **Emergency** key to go to the Revert Channel, and the radio displays the icon .
2. If the Alarm with Call to Follow feature is enabled, you can

speak into the microphone to make an emergency call when the radio displays the icon .

3. When the icon  appears, you can receive. And when a call is received, the icon  appears.
4. If the preset Voice Cycles expire, you can hold down the **PTT** key to make the emergency call again (the radio displays the icon , with red LED glowing). After the emergency call is transmitted, release the **PTT** key to receive (the radio displays icon , with LED flashing orange rapidly). And when a call is received, the icon  appears.

To exit the Emergency mode, long press the programmed **Emergency** key.



Note: Your dealer may set the number of polite retries and impolite retries number of voice cycles, duration of each transmission and TX interval.

Horn & Lights

If the mobile radio receives an emergency alert, a call alert or a private call and no key operation is made within the specified period, it will alarm via the external alarm devices (speaker or light). This feature is helpful for notifying the absent user.

Functions and Operations

Operation:

To enable or disable the feature, go to "Menu -> Accessories -> Horn & Lights", and select "On" or "Off";

or

Press the **programmed** Horn & Lights key.

Ignition Sense

The following options are available via the vehicle ignition. You may ask your dealer to assign any one to your radio.

1. Ignition or Switch

- **Description:** The radio powers on or off by following either the ignition sense or the **Power On/Off** key.
- **Operation:** o power on the radio, start the engine or long press the **Power On/Off** key; . to power it off, stop the engine or press the **Power On/Off** key.**Ignition Only**
- **Description:** The radio powers on or off by following the ignition sense only. The **Power On/Off** key does not work.
- **Operation:** To power on the radio, start the engine; to power it off, stop the engine.

2. PTT Disable

- **Description:** The **PTT** key is enabled or disabled by following the ignition sense.
- **Operation:** To enable the **PTT** key, start the engine; to disable the **PTT** key, stop the engine.

3. Disable Ignition Off

- **Description:** The radio powers on by following either the ignition sense or the **Power On/Off** key, but it powers off only through the **Power On/Off** key.

- **Operation:** To power on the radio, start the engine or long press the **Power On/Off** key; to power it off, press the **Power On/Off** key.

Scrambler /Encrypt

The Scrambler/Encrypt feature can encrypt your audio signals to prevent eavesdropping. Thus privacy of your communication is guaranteed.

This Encrypt feature can encrypt your audio signals and messages to prevent eavesdropping. Thus privacy of your communication is guaranteed.

Operation:

- On an analog channel, go to "Main Menu -> Settings -> Radio Set -> Scrambler" and select "Enable" or "Disable"; on a digital channel, go to "Main Menu -> Settings -> Radio Set -> Encrypt" and select "Enable" or "Disable".
- Press the programmed **Scrambler/Encrypt** key to enable Scrambler or Encrypt on the current channel (a high-pitched tone sounds); press the key again to disable the feature (a low-pitched tone sounds).
- If the Scrambler/Encrypt feature is enabled for a channel via the programming software, switch to the channel to enable the feature, or exit the channel to disable the feature.

Busy Channel Lockout

If enabled via the programming software, this feature can prevent your radio interfering with other transmitting terminals on the same channel. If you hold down the **PTT** key while the channel is

Functions and Operations

in use, your radio will keep beeping and display text information "Channel Busy!", alerting you to transmission prohibition. To stop beeping, please release the **PTT** key. When the channel is free, you can press and hold down the **PTT** key to transmit.

Time-out Timer (TOT)

The purpose of TOT is to prevent any user from occupying a channel for an extended period. If the preset time expires, the radio will automatically terminate transmission and keep beeping. To stop beeping, please release the **PTT** key. You must wait for a certain time period (preset by your dealer) to initiate another transmission.

If the pre-alert function is set by your dealer, your radio will alert you to the TOT expiration in advance.



Note: This feature is null in Emergency mode.

Pseudo Trunking

This feature can be enabled via the programming software. If your radio operates on a channel with this feature enabled and one time slot is already occupied, it can transmit and receive on the other free time slot, allowing you to communicate timely in case of emergency.

MIC AGC

If enabled via the programming software, your radio will process the audio signals during transmission, providing improved audio for the receiving radio.

Emergency Footswitch

This feature must be realized through further development. After successfully developed, you should request your dealer to enable it via programming software. This feature is quite useful in emergent situations to avoid any unexpected loss.



Note: Emergency footswitch will be unavailable if the Emergency feature is not enabled on the current channel.

Channel Steering

This feature must be realized through further development. After successfully developed, you should request your dealer to enable it via programming software. You can switch channels accurately and quickly with this feature.



Note: If this feature is enabled, you cannot switch channels via front panel operation.

Radio Registration Service

If enabled via the programming software, your radio will automatically register in the system within a certain period after power-on. Then it can acquire online information of other radios via accessing specific servers within the valid registration period.

GPS Revert

If enabled via the programming software, your registered radio will transfer its positioning information to the system when the system requires such information.

Signaling Introduction

The radio supports the following signaling. You can ask your dealer to make appropriate settings on your radio. For detailed information, please contact your dealer.




HDC1200

The HDC1200 signaling is compatible with the MDC1200 signaling, and realizes functions such as PTT ID (Encoding & Decoding), Emergency (Encoding & Decoding) and Selective Call (Encoding & Decoding).

Encoding:


1. Hold down the **PTT** key during normal voice communication to send PTT ID.
2. Go to the menu “Contact List” and select a required contact. Then hold down the **PTT** key to send a selective call (Private Call/Group Call/All Call).

For encoding, the radio will provide the following indications:

- PTT ID/Selective Call: Your dealer can program whether the radio sounds side tone during encoding or sounds beeps after encoding.
- Selective Call: During encoding, the LED glows red, and the LCD displays the appropriate call icon (Private Call: ; Group Call: ; All Call: ). After encoding, the LED glows orange.

Decoding:


For decoding, the radio provides the following indications:



- PTT ID: After decoding, the LCD displays the icon  and ID or alias of the transmitting party.

- Selective Call: After decoding, the radio provides the following indications:

Alert:The radio will sound default alert.

LED:The LED glows green.

LCD:If your dealer enables the Display Decode ID feature, the radio will display the appropriate call icon (Private Call ;

Group Call: ; All Call: ) and alias of the transmitting party (ID of the transmitting party will be displayed if it is not in the contact list). If your dealer does not enable the Display Decode ID feature, the radio will display the appropriate call icon only.

5-Tone


This radio can realize various types of calls through 5-Tone signaling.


Encoding:

1. Request your dealer to configure the correct format and type for the encoding contents.
2. When the format consists of fields for variable information, you need to fill in such fields by manual entry or menu operation; When the format consists of fixed codes only, you do not have to edit such fields or save such data.
3. Press **PTT** or the programmed **Smart Call 1 - Smart Call 5** keys to send the 5-Tone signaling.

During encoding, the radio sounds a side tone, the LED glows red, and the LCD displays the contact information (or “Five Tone

Signaling Introduction


Call”) and an appropriate call icon (Private Call: ).


Group Call: ). If Auto Reset is enabled (by your dealer), your radio will enter the Auto Reset mode after successful encoding, with LED glowing orange, until the Auto Reset Time expires.

Decoding:

Your radio can automatically decode the 5-Tone signaling when receiving any matched one.

During decoding, the LED glows green. After successful decoding, the LCD displays the contact information (or “Five

Tone Call”), an appropriate call icon (Private Call: );


Group Call: ), and the decoded status message. If Auto Reset is enabled (by your dealer), your radio will enter the Auto Reset mode, with LED glowing orange, until the Auto Reset Time expires.

2-Tone

With this signaling, the radio can transmit and receive 2-Tone calls.

Encoding:


1. Request your dealer to configure the correct format and type for the encoding contents.
2. Press **PTT** key or the programmed **One Touch Call 1-One Touch Call 5** keys to send the 5-Tone signaling.

During encoding, the radio sounds a side tone, the LED glows red, and the LCD displays the call icon  with contact information above it. If Auto Reset is enabled (by your dealer), your radio will enter the Auto Reset mode after successful encoding, with LED glowing orange, until the Auto Reset Time expires.

Decoding:

Your radio can automatically decode the 2-Tone signaling when receiving any matched one.

During decoding, the LED glows green. After successful

decoding, the LCD displays the call icon  and the call type (selective call, alert call w/voice, alert call) below the icon according the decoding type.

If Auto Reset is enabled (by your dealer), your radio will enter the Auto Reset mode, with LED glowing orange, until the Auto Reset Time expires. The radio cannot enter the Auto Reset mode if it is an alert call.

Troubleshooting

Phenomena	Analysis	Solution
The radio cannot be powered on.	The power cord may be unconnected.	Connect the power cord correctly.
During receiving, the voice is weak, discontinuous or totally inactive.	The volume may be set to a low level.	Increase the volume by rotating the Volume Control knob clockwise.
	The antenna may get loose or improperly installed.	Power off the radio, re-install the antenna and power on the radio again.
	The speaker may be blocked or damaged.	Clean surface of the speaker. If the problem can not be solved, contact your dealer or our authorized service center for inspection and repair.
You can not communicate with other members in Analog mode.	The frequency or signaling may be inconsistent with that of other members.	Set your TX/RX frequency and signaling to the same as that of other members.
	You may be too far away from the group members.	Move towards other members. And make sure that you are within the communication range.
You can not communicate with other members in Digital mode although there is receiving indication.	Your ID may be inconsistent with that of other members. Consequently, the digital carrier can be received but can not be demodulated.	Set your ID to the same as that of other members.
Irrelevant communications or noises are heard on the analog channel.	You may be interrupted by products using the same frequency.	Adjust the squelch level.
	The product may be set with no signaling.	Set your radio with signaling to avoid interference at the same frequency, and make sure that all members share the same signaling.
The noise is too loud.	You may be too far away from other members.	Move towards other members, and then try again.
	You may be at an unfavorable position. For example, your communication may be blocked by high buildings or frustrated in the underground areas.	Move to an open and flat area, and restart the product.
	You may suffer from external disturbance (such as electromagnetic interference).	Stay away from equipment that may cause interference.
You can not use the keys.	The keypad may fail to function temporarily.	Restart the radio.
The LCD does not display any information.	The LCD may fail to function temporarily.	Restart the radio.
The GPS cannot locate your position.	The GPS antenna is improperly connected.	Connect the GPS antenna correctly.
	No GPS signal is received.	Move to an open and flat area, and restart the product.

If the above solutions can not fix your problems, or you may have some other queries, please contact us or your local dealer for more technical support.

Care and Cleaning

To guarantee optimal performance as well as a long service life of the product, please follow the tips below.

Product Care

- Keep the product at a place with good ventilation and heat dissipation to facilitate normal work.
- Do not place irrelevant articles on top of the product to ensure optimal heat dissipation.
- Do not place the product in corrosive agents, solutions or water.

Product Cleaning

- Clean up the dust and fine particles on the product parts with a clean and dry lint-free cloth or a brush regularly.
- Use a non-woven fabric with neutral cleanser to clean the keys, control knobs, LCD and jacks after long-time use. Do not use chemical preparations such as stain removers, alcohol, sprays or oil preparations. Make sure the product is completely dry before use.



Caution: Power off the product before cleaning.

Optional Accessories

The following items are the main optional accessories for the product, and please consult your local dealer for more other accessories.

Desktop Microphone SM10A1	External Speaker SM09D1	Programming Cable (USB Port) PC47	Data Cable PC40
			
Palm Microphone with Keypad SM19A1	External Power Supply PS22002	Antenna	Back-to-back adapter cable
			
Dispatching cable of DB26 (with USB port and double audio head) PC43	MD780 Remote control kit RCC04 (3m)/RCC05 (6m)	MD780 built-in installation bracket (DIN) BRK15	
			



Caution: Use the accessories specified by the Company only. If not, the Company shall not be liable for any losses or damages arising out of use of unauthorized accessories.

Appendix

Input Method

You can enter aliases, numbers or messages using the microphone with a keypad. The radio supports the following input methods: Chinese Pinyin (simplified), English and Number.

Chinese Pinyin (Simplified)

Operation:

1. Press **#,*** to switch to Chinese Pinyin mode;
2. Enter the pinyin through alphanumeric keys; then a list of possible combinations and corresponding characters will appear;
3. Use the **Up/Down** key to choose the right pinyin;
4. Press the **OK** key to highlight the characters, and choose the right character using the **Up/Down** key;
5. Press the **OK** key to enter the selected character.

You can repeat the above steps to continue.

English

Operation:

1. Press **#,*** to switch to uppercase English or lowercase English mode;
2. Press the key which bears your desired letter repeatedly until the letter appears.

You can repeat the above steps to continue.

Number

Operation:

1. Press **#,*** to switch to Number mode;
2. Enter the numbers through alphanumeric keys **0+** to **9 xyz.**

Special Character

To enter common punctuations and special characters, press **1<**.
To input a space, press ***-.**



Note: You can use the **Up/Down** key to move the cursor leftward/rightward in the entered text.